







T701i

Pro1 Technologies

P.O. Box 3377 Springfield, MO 65808-3377

Toll Free: 888-776-1427 Web: www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern


Table of ContentsPageTable of Contents1Thermostat Operation2-3Thermostat Quick Reference4Thermostat Warranty Information5

Una version en español de este manual se puede descargar en la pagina web de la compañia.



Caution

Equipment damage hazard Do not operate the cooling system if the outdoor temperature is below 50 °F (10 °C) to prevent possible compressor damage.

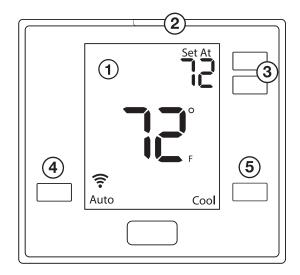

- 1 LCD Display
- (2) Glow in the Dark Light Button
- **3** Temperature Setpoint Buttons
- 4) Fan/ User Button
- **5**) System/ User Button

1 LCD Display

See page 2 for details about display and read out icons.

② Glow in the Dark Light Button

The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

3 Temperature Setpoint Buttons

Press the + or - buttons to select the desired room temperature.


Fan Button:

Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will run the fan only when the heating or cooling system is on.

Note: Some systems may have fan control disabled.

5) System Button:

Select the operation mode of your HVAC system. Selecting **HEAT** will put your system in heating mode. Selecting **COOL** will put your system in air conditioning mode. Selecting **OFF** turns the system off.

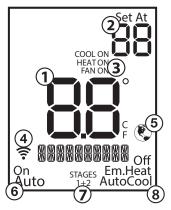

- 1 Indicates the current room temperature
- (2) **Setpoint:** Displays the selected setpoint temperature.
- System Operation Indicators: The COOL ON, HEAT ON or FAN ON will display when the COOL, HEAT, or FAN is on. The compressor delay feature is active if these are flashing.
- (4) WIFI Indicator: Shown when connected to WiFi.
- (5) Globe: Globe is displayed if an energy efficient temperature has been selected.
- **(6) Fan:** Indicates the current fan setting.
- (7) Stages: +1 will appear in the display when the first stage of heat or cool is on.
- 8 System: Indicates current system mode setting.

Warranty Registration

Your new thermostat has a 5 year limited warranty. You must register your thermostat within 60 days of installation. Without this registration the warranty period will begin on date of manufacture. For warranty issues please contact the HVAC professional that installed this product. Please register your new thermostat online.

Please Register Your Thermostat Here

www.pro1iaq.com/warranty





For More Information About Your Thermostat

